





dECO Clouds - Suspended Ceiling Grid

Tools you'll need:

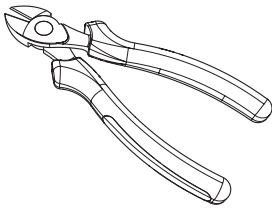


Side Cutters

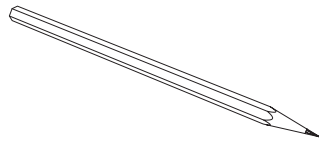

Pencil


Step 1

Determine the location of the cloud fixing on the ceiling grid and mark with pencil.

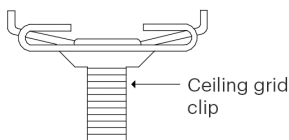


Step 2

Feed cable (soldered end) through the knurled ceiling attachment so stop sleeve is in the ceiling attachment.

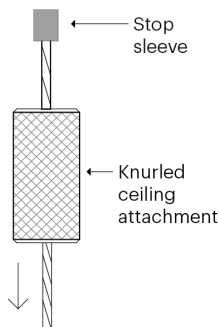


Step 3

Fit the ceiling grid clip to steel grid by placing on a 45 degree angle. Push up so the ceiling grid clip legs are depressed. At the same time as pushing up turn the ceiling grid clip clockwise into position.

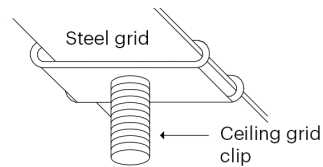


Step 4

Screw ceiling attachment to the threaded dowel and suspend the cable.

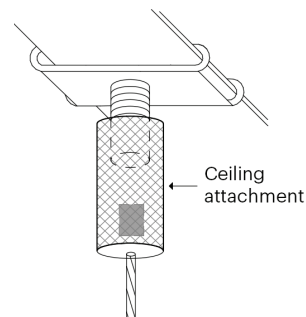


Step 5

Insert the dual screw and thread into cable holder and place small and large washer through the dual screw thread.

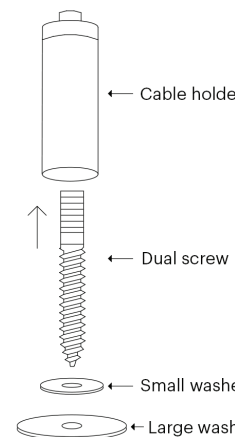

Step 6

Select position of fixing on back of acoustic cloud and mark with pencil.
Screw the dual screw into acoustic cloud.
Do not over tighten as the screw end will pierce the face and/or cause dimpling on the cloud surface. Maximum screw depth is 20mm.

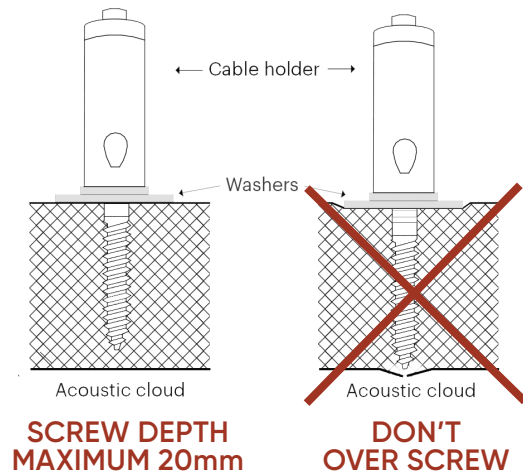

Step 7

Feed cable into cable plunger. Pull through until desired height. Adjust height by pressing the plunger at top to move the holder up and down. Cut excess cable with cable cutters.

