
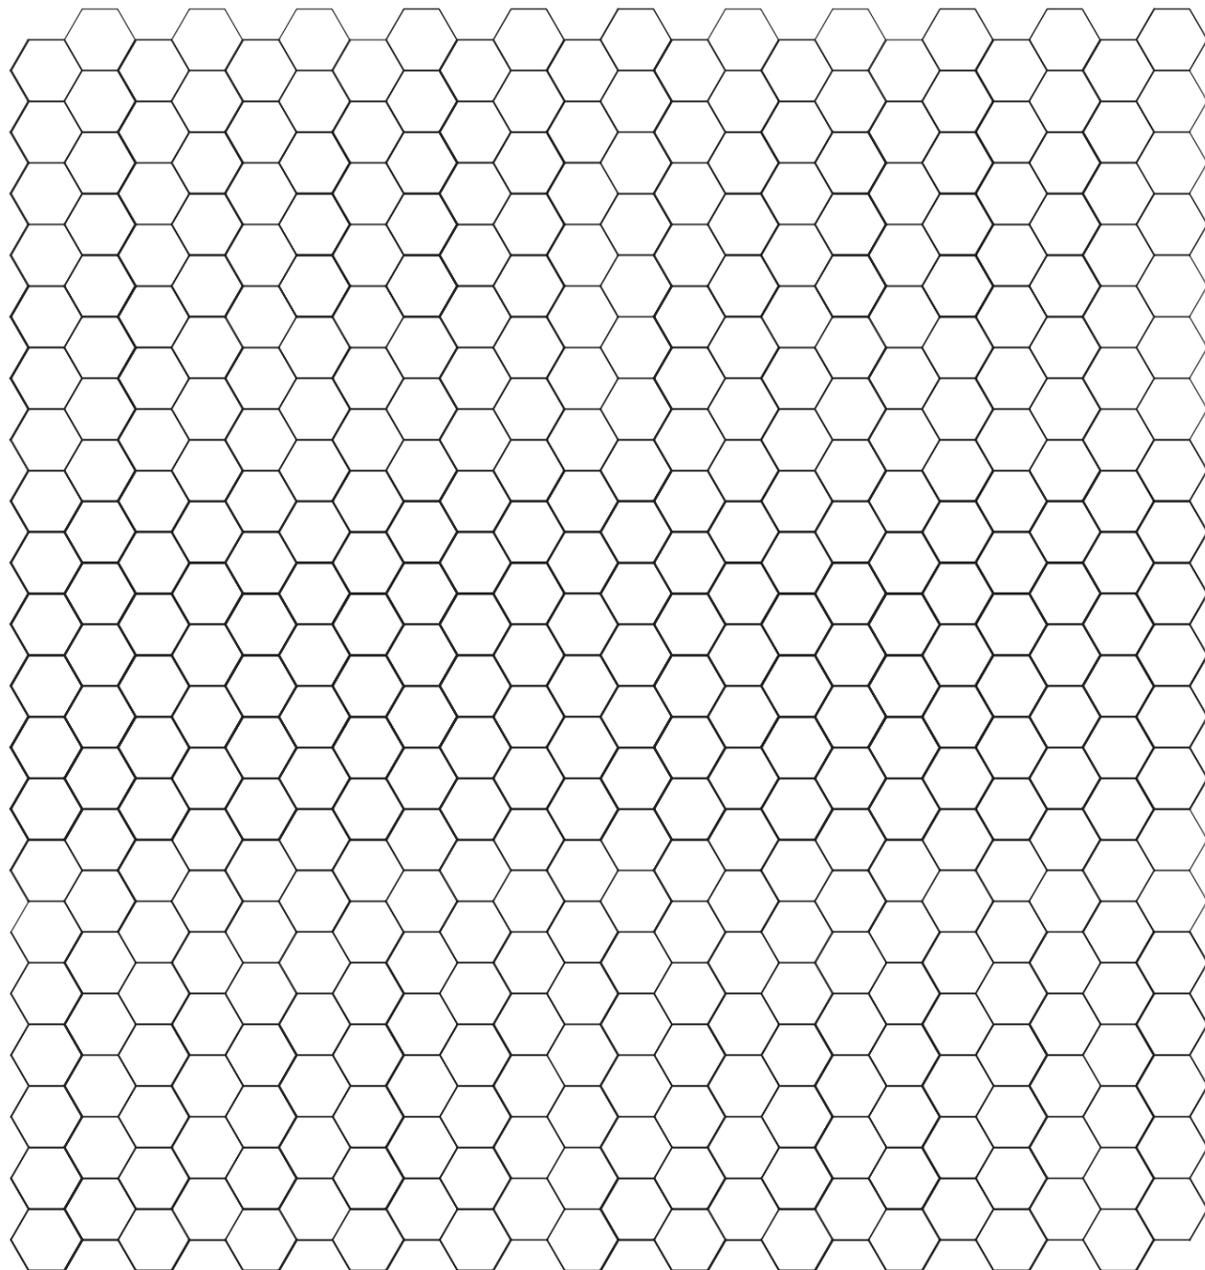


Planning Your Tile Design


The freedom of the dECO 3D Tile collection is that it allows you to create a unique pattern.

Use this blank styling template to colour your design so you can stay on track when installing the tiles.


See our example below:

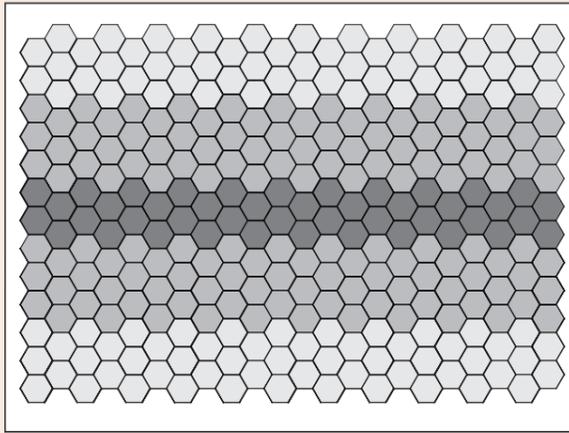

Components:

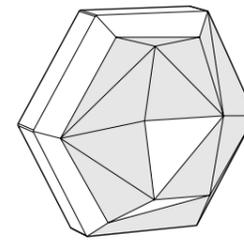

3d Tile

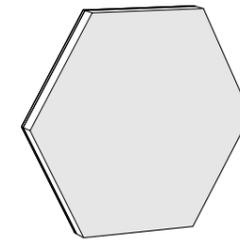


Acoustic Infill




Spacer Jig


Tools you'll need:

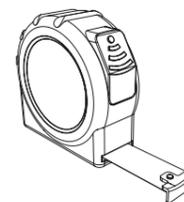

Measuring Tape

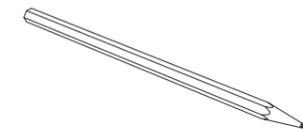

Pencil

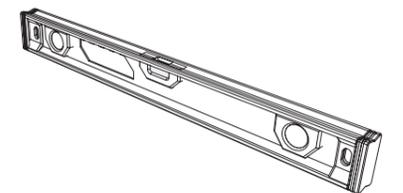


Level

NOTE: Before applying the acoustic infills in position ensure you have measured your space. Once applied these are difficult to remove.


Step 1

Mark the area you are placing the first tile. Peel the backing off the of the acoustic infill.

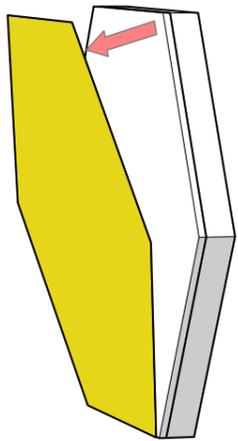


Step 2

Press the infill on the wall slightly to hold in place ensuring its aligned to where you wanted it. Firmly apply pressure to secure to the wall.

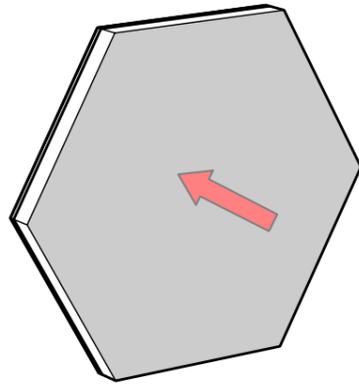


Step 3

Use the spacer jig to measure the position of the next infill.

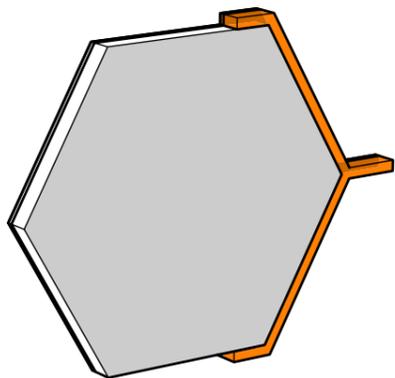


Step 4

Peel backing off the next acoustic infill and apply in the correct position. Once applied remove the spacer jig to the next location as per your chosen design.

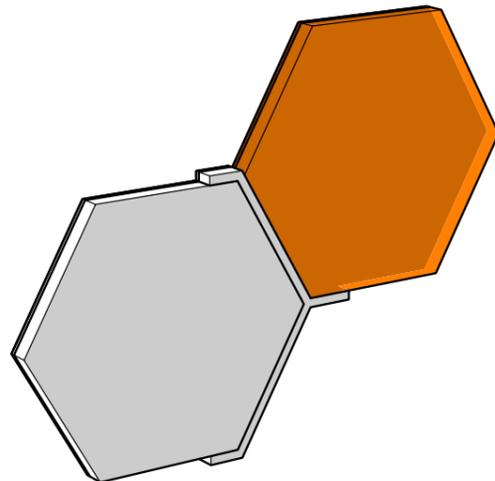


Step 5

Once applied remove the spacer jig to the next location as per your chosen design and repeat.

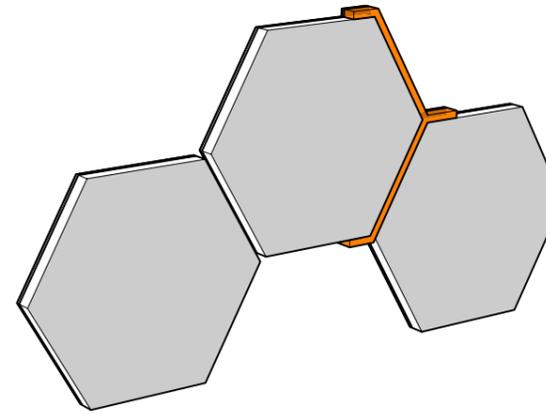


Step 6

Once all acoustic infills have been applied, friction fit the dECO 3D Tiles onto the infills.

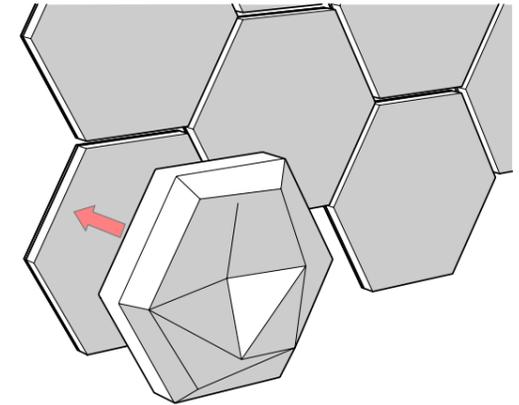

Step 7

Repeat process to create desired pattern.

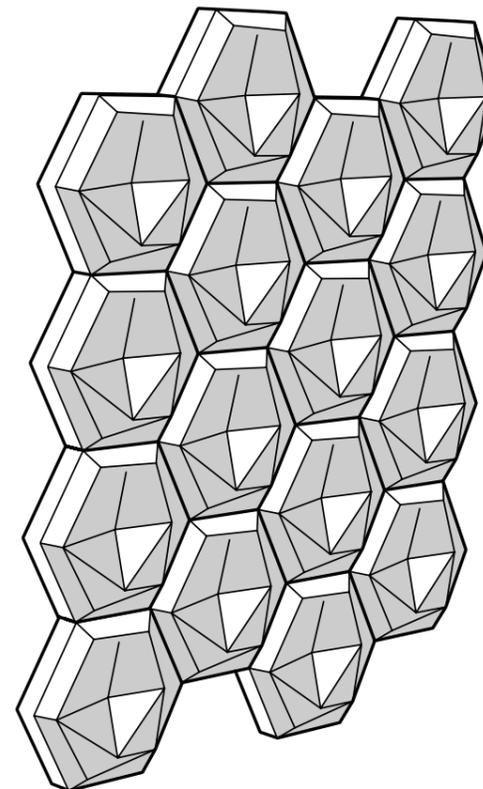

TIP

- To remove acoustic infill you will need Citrus Spray.
- Carefully spray the back of the tile against the wall.
- It will slowly start to come off the wall.
- This requires patience and continuous application of spray.
- We always recommend 'measure twice apply once'